


MILLENNIUM ENTERPRISES, INC.

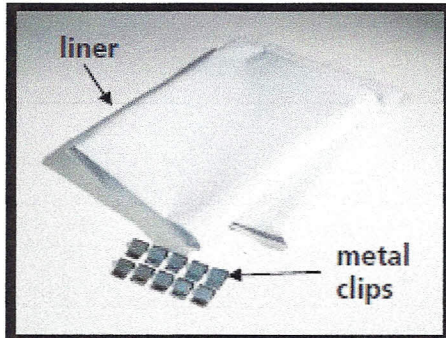


STEP 1

Open all boxes and packages. Read the instructions and locate all parts prior to proceeding.

STEP 2

Place the liner inside the berm. Center the liner so the material is snug against the wall and floor of the berm.

Note: This should leave a minimum of 12 inches to overlap and extend over the wall on all four sides of the berm.

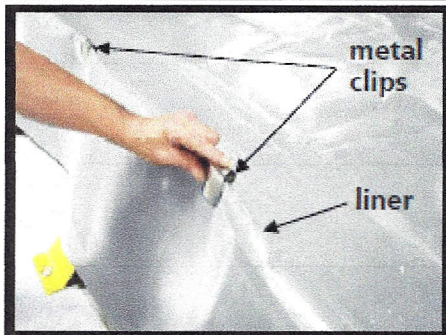

STEP 3

Using provided metal clips, attach the clips by starting at one end and slide over the berms' top edge as shown.

Note: Material should be against the wall and floor before attaching clips. Recommended spacing between clips is no more than 36 inches apart.

STEP 4

Once metal clips are in place, gently tap down until clip is completely over the top of wall.

Note: Berm not included.

